



## Example of Split Drainage

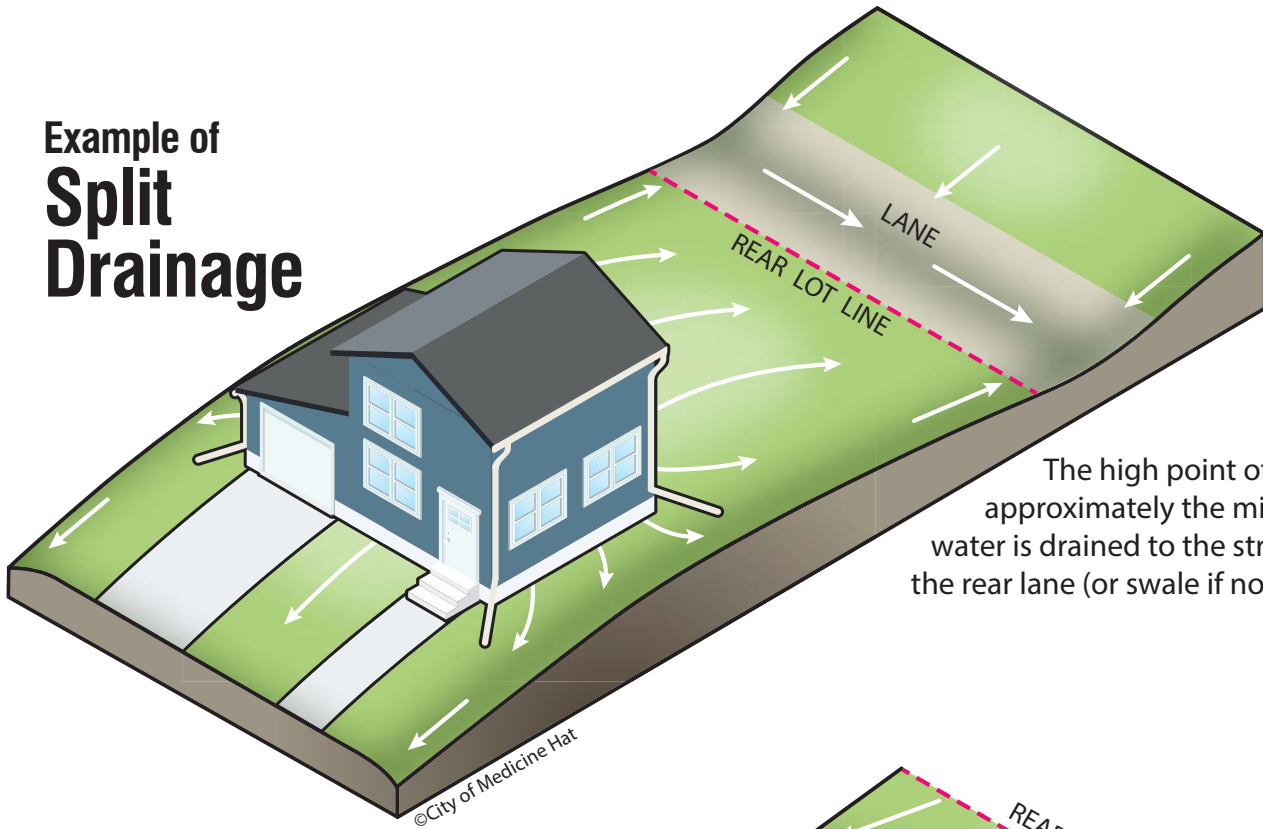

The high point of the lot is at approximately the midpoint. Surface water is drained to the street in front, and to the rear lane (or swale if no lane is present).

## Example of Rear to Front Drainage

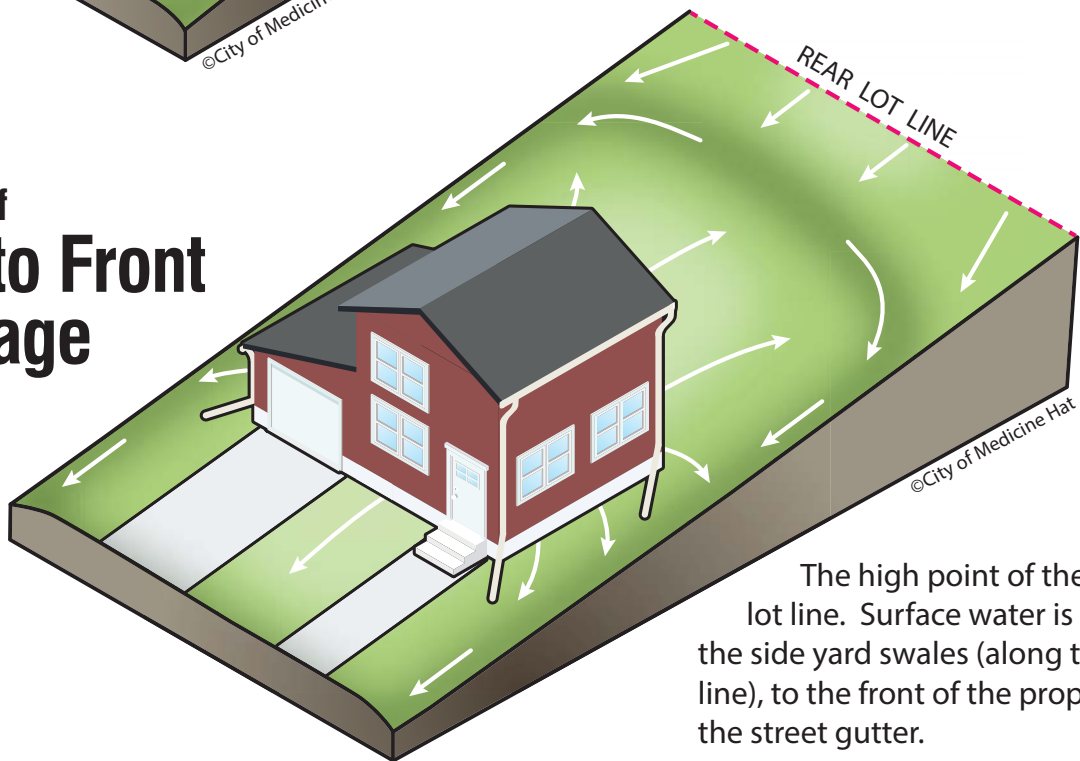

The high point of the lot is the rear lot line. Surface water is directed toward the side yard swales (along the common lot line), to the front of the property and into the street gutter.